

# RadioLink RC6GS V3

## Instruction Manual

## 使用说明书



## SAFETY PRECAUTIONS

- Never operate your model during adverse weather conditions. Poor visibility can cause disorientation and loss of control of your model.
- Never use this product in a crowd and illegal area.
- Always ensure the trim levers at 0 and battery properly charged before connecting the receiver.
- Always check all servos and their connections prior to each run.
- Always be sure about turning off the receiver before the transmitter.

## WARNING

This product is not a toy and is **NOT** suitable for children under the age of 14. Adults should keep the product out of the reach of children and exercise caution when operating this product in the presence of children.

Water or moisture may enter the transmitter inside through gaps in the antenna or joystick and cause model instability, even out of control. If running in the wet weather (such as game) is inevitable, always use plastic bags or waterproof cloth to cover the transmitter.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

(2) Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Packing list (Please refer to the sales interface for the actual packing list)

No.	Items	Quantity
1	RC6GS V3 Transmitter	1
2	R7FG Receiver	1
3	EXT Connect Cable for F7FG	1
4	Lanyard	1
5	Instruction Manual	1
6	Packing Box	1

# Contents

<b>I. RC6GS V3 Remote Control System</b>	<b>4</b>
1.1 Transmitter RC6GS V3	4
1.1.1 Transmitter Overview	4
1.1.2 Switch/Button Introduction	4
1.1.3 Specifications	4
1.1.4 Basic Operations	5
1.2 Receiver R7FG(Standard Pack)	5
1.2.1 R7FG Overview	5
1.2.2 Specifications	6
1.2.3 Binding	6
1.2.4 Precautions for Receiver Usage	6
1.2.5 Working Modes	6
1.2.6 Gyro Setup	7
1.2.7 Telemetry of Model Battery Voltage	7
1.2.8 RSSI Testing	7
<b>II. RC6GS V3 Functions</b>	<b>8</b>
2.1 Servo Value	8
2.2 Language "LANGUAGE" (语言选择)	8
2.3 Model Select "MODEL"	8
2.4 End Point Adjust "EPA"	8
2.5 Steering Exponential "STEXP"	9
2.6 Steering Servo Speed Delay "STSPD"	9
2.7 Throttle Exponential "THEXP"	9
2.8 Throttle Speed Delay "THSPD"	9
2.9 A.B.S. Function "A.B.S"	10
2.10 Throttle Acceleration "ACCEL"	11
2.11 Idle-up "IDLUP"	11
2.11.1 Idle-up at Engine Start	11
2.11.2 Cruise Control "TH-LOCK"	11
2.12 Sub-trim "SUBTRIM"	11
2.13 Channel Reverse "REVERSE"	11
2.14 Steering/Throttle Dual Rate "D/R"	11
2.15 Brake Side Adjustment "ATL"	12
2.16 Programmable Mixes "PMIX01/02"	12
2.16.1 Mix Control Setup	12
2.17 Auxiliary Channel "AUX-CH"	12
2.18 Model Name "NAME"	12
2.19 ALARM(Safety Alarm for Low Voltage and Signal Strength)	12
2.20 Gyro Sensitivity "GYRO"	13
2.21 Fail Safe "F/S"	13
2.22 ID SEED	13
2.23 DSC Port Setting "DSC"	14
2.24 Timer Setting "TIMER"	14
2.25 Factory Reset "RESET"	15
<b>III. Tutorials</b>	<b>15</b>
3.1 Firmware Update of RC6GS V3	15

3.2 Throttle and Steering Calibration .....	15
3.3 Connect RC6GS V3 to Simulator .....	15
3.4 THSPD Throttle Delay Function on RC6GS V3 .....	15
3.5 TIMER Function on RC6GS V3 .....	15
3.6 Dual Rate Function on RC6GS V3 .....	15
3.7 EPA Function on RC6GS V3 .....	15
3.8 Set Different ALARM for 30 Different Models on RC6GS V3 .....	15
3.9 ID Seed Function on RC6GS V3 .....	15
3.10 Cruise Control Function on RC6GS V3 .....	15
3.11 Connect RC6GS V3 to TBS Crossfire .....	15
3.12 Head Track Setup on RC6GS V3 .....	15
3.13 LK-A/LK-D Button Setup on RC6GS V3 .....	15
3.14 Setup FPV Monitor on RC6GS V3 .....	15
3.15 TX Low power & Power Supply Options of RC6GS V3 .....	15

# I. RC6GS V3 Remote Control System

## 1.1 Transmitter RC6GS V3

### 1.1.1 Transmitter Overview



### 1.1.2 Switch/Button Introduction

Switch/Button	Introduction	Function
ST	Steering wheel	Default control channel 1 steering. Customizable to control other channels
TH	Throttle trigger	Default control channel 2 throttle. Customizable to control other channels
VR	Knob switch	Default control channel 3. Customizable to control channel 3/4/5/6/7
SwA	Momentary switch	Default control channel 4. Customizable to control channel 3/4/5/6/7
SwB	Three-way switch	Default control channel 5. Customizable to control channel 3/4/5/6/7
SwC	Three-way switch	Default control channel 6. Customizable to control channel 3/4/5/6/7
SwD	Momentary switch	Default control channel 7. Customizable to control channel 3/4/5/6/7
LK-A	Two-way switch	Lock mode of SwA. Customizable to control channel 3/4/5/6/7
LK-B	Momentary switch	Lock mode of SwB. Customizable to control channel 3/4/5/6/7
LK-C	Momentary switch	Lock mode of SwC. Customizable to control channel 3/4/5/6/7
LK-D	Two-way switch	Lock mode of SwD. Customizable to control channel 3/4/5/6/7

#### Note:

1. CH in the transmitter stands for Channel.
2. Momentary switch: The servo value will reach the maximum (or the minimum) when pressing the button (the switched is in a certain position), and back to the original value when loosen (the switched is in the certain position again).
3. Two-way switch: The servo value will reach the maximum (or the minimum) when pressing the button once, and back to the original value when pressing the button again.
4. Three-way switch: Three different servo values will be switched when the switch is located at three different positions.

### 1.1.3 Specifications

Size: 174.8\*116.4\*224.2mm(6.88\*4.58\*8.83")

Channel: 7 channels

ID seed: 10

Control Range: 600 meters

Modulation Mode: GFSK

LCD Screen: 128\*64 Resolution, LCD Backlight

Battery Box Dimension: 89\*59\*25mm (3.5\*2.32\*0.98")

Adaptable Models: Cars/Boats/Robots

Operating Voltage: 4.8-16.8V, 6pcs of AA batteries or 2S-4S LiPo battery

Weight: 319g(11.28oz)

Model Memory: 30

Antenna Length: 106mm(4.17")

Spread Spectrum: FHSS

RF Power: <20dbm

Frequency: 2.4Ghz ISM Band( 2400MHz--2483.5MHz )

Channel resolution: 4096 with regular jitter of 0.5us

Operating Current: 80-120mA

Low Voltage Alarm: Support


Low RSSI Alarm: Support  
 Simulator Function: Support  
 Model Battery Voltage Telemetry: Maximum 8S (33.6V) model battery voltage telemetry  
 Compatible Receiver: R7FG(Standard)/R8FG/R8EF/R8F/R6FG/R6F/R4FGM/R4F

FPV Head Track Function: Support  
 CRSF Protocol: Support

### 1.1.4 Basic Operations




### Display on LCD Screen

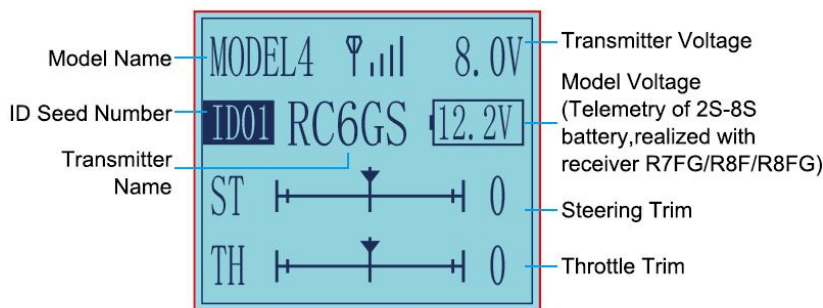

## 1.2 Receiver R7FG(Standard Pack)

### 1.2.1 R7FG Overview

RC6GS V3 comes with an R7FG, 2.4GHz 7 channels receiver, splash-proof, gyro integrated and high voltage servo supported.

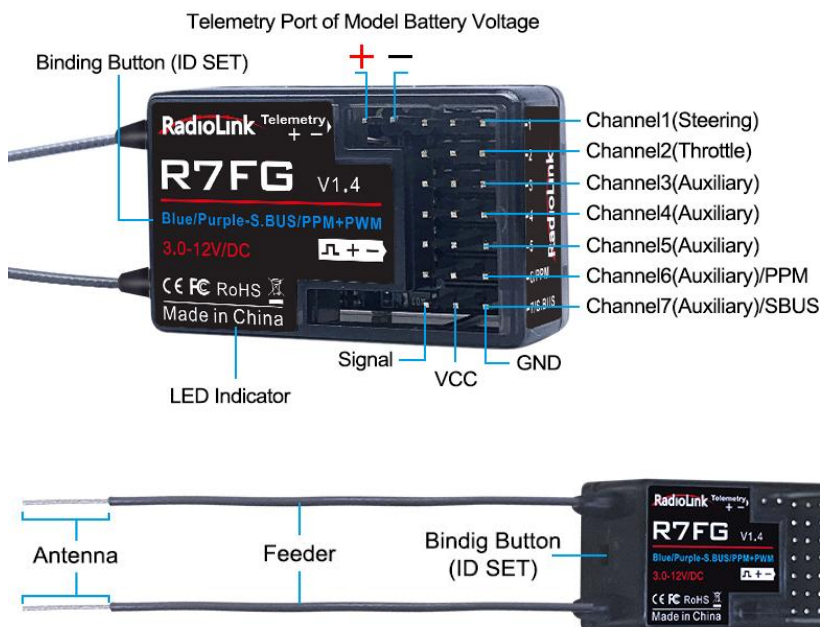

### 1.2.2 Specifications

Size: 35\*22\*14mm (1.38\*0.87\*0.55")

Channel: 7 channels

Operating Current: 30mA

Control Distance: 600 meters on the ground

Gyro: With gyro-integrated, customizable gyro sensitivity

Water Splash Proof : IPX4

Real-time Telemetry: Support. Telemetry of maximum 8S(33.6V) battery supported.

Compatible transmitter: RC8X/RC6GS V3/RC6GS V2/RC4GS V2/RC6GS (3-position switch version)/RC4GS (version with P.D AFTER 180101)/T8S/T8FB

Weight: 6g (0.21 oz)

Antenna Length: 205mm(8.07")

Operating Voltage: 3-12V


Signal: PWM&PPM&SBUS

Applicable Model Types: Cars /Boats/Robots

### 1.2.3 Binding

RC6GS V3 and R7FG have already finished binding by default. Turn on the RC6GS V3 and the R7FG, the signal tower will be displayed on the top of the screen as in the picture right, which means the transmitter and receiver have finished binding.

If you purchase a new R7FG receiver separately, you need to bind the receiver to the transmitter. Each receiver has an individual ID code. When the binding is done, the ID code will be stored in the transmitter and there's no need to rebind.

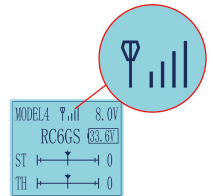


#### Binding Steps:

1. Put the transmitter and the receiver close to each other (about 50 centimeters) and power both on.
2. Switch on the transmitter and the LED on R7FG will start flashing slowly.
3. There is a black binding button(ID SET) on the side of receiver. Press the button for more than 1 second and release, the LED will flash quickly, meaning binding process is ongoing.
4. When the LED stops flashing and is always on, binding is complete and there will be a signal tower shown on top of the LCD screen of the transmitter. If not succeed, the LED will keep flashing slowly to notify, repeat the above steps.

**Note:** Too close distance between the transmitter and receiver may cause a signal block, which leads to unsuccessful binding or signal loss. After the binding is successful, if RC6GS V3 and R7FG receiver are too close (for example, within 60 centimeters), the signal may also be lost because of signal block. Bring RC6GS V3 transmitter and R7FG receiver farther apart, the signal loss will disappear automatically.

### 1.2.4 Precautions for Receiver Usage

1. Please test RSSI(Received Signal Strength Indicator) before operating models. For methods on how to test it, please refer to Chapter 1.2.8.
2. If the antenna of the receiver is damaged, replace it with a new antenna or receiver in time.
3. Keep the two antennas at a 90-degree angle (as shown on the right).
4. Big models may contain metal parts that influence signal emission. In this case, antennas should be positioned at both sides of the model to ensure the best signal status in all circumstances.
5. Antennas should be kept away from metal conductor and carbon fiber at least half inch away and no over bending.
6. Keep antennas away from motor, ESC or other possible interference sources.
7. Sponge or foam material is advised to use to prevent vibration when installing receiver.
8. Receiver contains some electronic components of high-precision. Be careful to avoid strong vibration and high temperature.
9. Special vibration-proof material for R/C like foam or rubber cloth is used to pack to protect receiver. Keeping the receiver in a well sealed plastic bag can avoid humidity and dust, which would possibly make the receiver out of control.

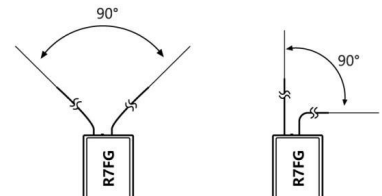

### 1.2.5 Working Modes

R7FG has a built-in gyroscope, which can output not only PWM signal but also PPM and SBUS signals. There are four working modes, including ordinary PWM mode, SBUS mode, Gyro mode, and Gyro + SBUS mode. The channel signal corresponding to each mode are as follows:

R7FG Working Mode						
Working Mode		PWM Mode	SBUS Mode	Gyro mode	Gyro + SBUS Mode	Note
LED Indicator Color		Green	Blue	Red	Purple(Red+Blue)	
Channel	Telemetry	Telemetry Port of Model Battery Voltage ( + - ) TELEMETRY port is only for 2S-8S battery voltage telemetry. The port cannot be used to power the receiver.				
	1	PWM	PWM	PWM	PWM	Steering
	2	PWM	PWM	PWM	PWM	Throttle
	3	PWM	PWM	PWM	PWM	Auxiliary
	4	PWM	PWM	PWM	PWM	Auxiliary
	5	PWM	PWM	PWM	PWM	Auxiliary
	6/PPM	PWM	PPM	PWM	PPM	Auxiliary
	7/S.BUS	PWM	S.BUS	PWM	S.BUS	Auxiliary

#### Working mode settings

1. Turn on/off the gyro: Short press the binding button 3 times within 2 seconds to switch the gyro on and off, and the color of the LED indicator will switch accordingly.
2. Gyro phase switch: Short press the binding button twice within 2 seconds to switch the gyro phase.
3. Turning on/off the SBUS: short press the binding button once to turn on/off the SBUS, and the color of the LED indicator will switch accordingly. After SBUS signal is enabled, channel 1-5 output PWM; the sixth channel outputs the PPM signal, and the seventh channel outputs the SBUS signal.



### 1.2.6 Gyro Setup

The gyro function of receiver R7FG for professional car can be enabled and disabled. When it's enabled, the turning stability can be maximized during competition. When there is false position, gyro function keeps the car straight forward and turn precisely.

#### A. Gyro Enabled

Factory setting is gyro function OFF by default. Short press the binding button (ID SET) three times with interval less than 1 second, the RED indicator flashes three times. Red LED on/off indicates the gyro function is on/off.

#### Attention:

1. It's normal that the servo keeps shaking when connected to the receiver. Because the gyro is helping to correct the steering gear angle of the servo automatically if the gyro function has turned on, you can turn off the gyro function if you do not need this function.
2. The servo shakes strongly means the gyro is too much sensitive. Please turn VR knob to reduce the gyro sensitivity.
3. If the receiver has been switched to the gyro mode (with LED indicator ON), but the gyro does not work when turning the car, please enter the menu 20. GYRO to check if the RATE is close to 0%, and increase the RATE.

#### B. Gyro Phase


When the gyro forward is enabled, try to turn the model car to check if the gyro is correcting the wheels. Normally, the wheels should turn right to correct when the car is turned left while the wheels should turn left to correct when the car is turned right. If the gyro phase is reversed, short press the binding button (ID SET) twice with interval less than 1 second. The RED indicator flashes twice means the gyro phase is switched.

#### C. Gyro Sensitivity Adjustment

The gyro sensitivity can be adjusted in the BASIC MENU-- GYRO in the transmitter. VR and STD modes are optional. Gyro sensitivity setting is CH3 by default (factory setting) and can be adjusted by VR knob. If VR knob or channel 3 is used for other functions, select STD mode and adjust the gyro sensitivity by buttons Dec(-) or Inc(+) . Percentage is displayed when sensitivity is adjusted while the bigger percentage means higher sensitivity.

### 1.2.7 Telemetry of Model Battery Voltage

Model battery voltage can be returned in real time when R7FG receiver is bound to RC6GS V3 successfully. It can be set in the menu "19. ALARM". For example, if it is 3S lithium battery used in the model car, the warning value should be set as 11.1V (3.7V\*3). The connection is as follows:

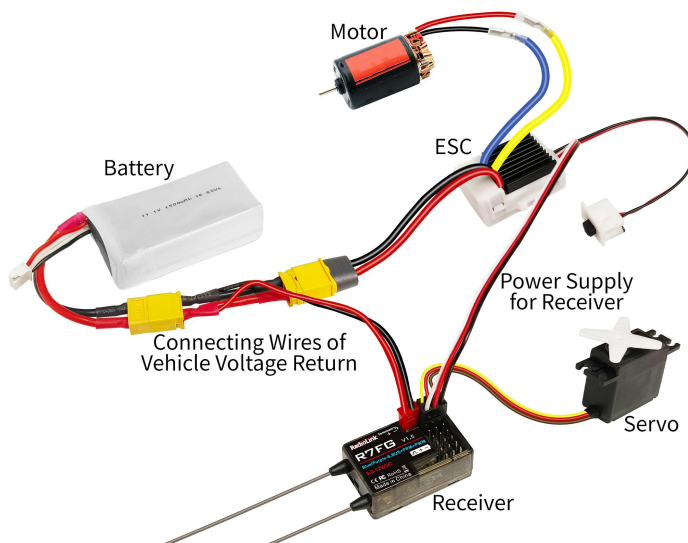

#### Note


1. Battery connected to TELEMETRY port is only for 2S-8S (7.4V-33.6V) battery voltage telemetry. The TELEMETRY port cannot be used to power the receiver.
2. R8FG, R7FG and R8F receiver all support telemetry of model battery voltage. Make sure the polarity of the battery is not reversed. Otherwise reverse insertion will cause abnormal voltage display of telemetry.

### 1.2.8 RSSI Testing


RSSI stands for Received Signal Strength Indicator.

#### RSSI test method:

1. After successful binding between the receiver and the transmitter, the signal tower in **Picture 1** appears on the screen.

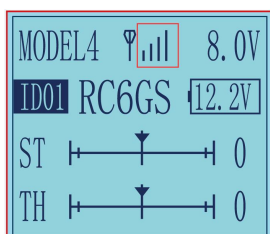


Picture 1

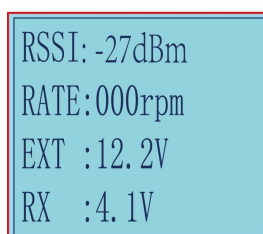

Picture 2



2. Short press the Exit button twice in the home page to enter the return information interface. RSSI is at the top of the interface in **Picture 2**.
3. Make the receiver antenna and transmitter antenna parallel, and keep a distance of about 60 centimeters from the transmitter(as shown below) to observe the RSSI value. It is normal that RSSI value is within the range of 0 to -30dBm. The closer the value is to 0, the stronger the signal is. If RSSI is not within the range of 0 to -30dBm, the RSSI value is abnormal and there is some problem of signal transmission.

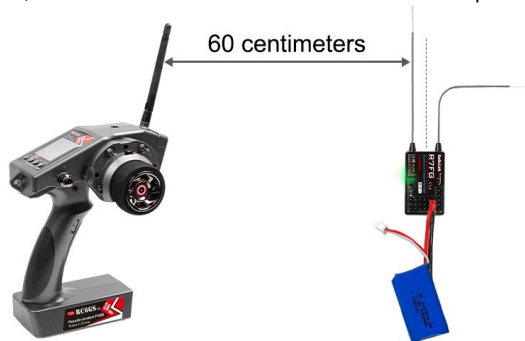

#### Abnormal Signal Strength Solution:

1. Check whether the antenna of the receiver or the transmitter is damaged. If it is damaged, the antenna needs to be replaced.
2. If there is no damage of the antenna, you can test the transmitter and receiver for malfunctions by replacing the receiver.

## II. RC6GS V3 Functions

### 2.1 Servo Value


After powering on RC6GS V3, press the "Exit" button on the main interface to view the servo value (See Picture 1 and Picture 2 below).

### 2.2 Language "LANGUAGE" ( 语言选择 )


Both English and Chinese menus are available (See Picture 3 below).

### 2.3 Model Select "MODEL"

RC6GS V3 can store model memories for 30 models. Use this function to call a new model. Each model can independently set the parameters of each function (See Picture 4 below).

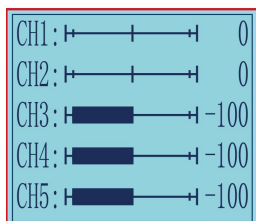


Picture 1

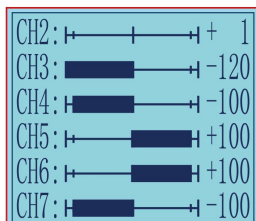

Picture 2



Picture 3



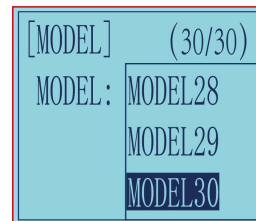


Picture 4

### 2.4 End Point Adjust "EPA"

Use EPA when performing left and right steering angle adjustments, throttle high side/brake side operation amount adjustment, and channel 3 servo up side/down side operation amount adjustment during linkage.

Correct the maximum steering angle and left and right steering angles when there is a difference in the turning radius due to the characteristics, etc. of the vehicle.

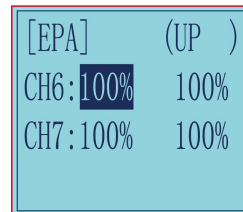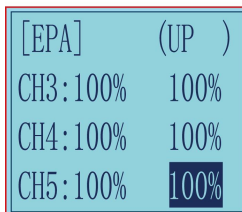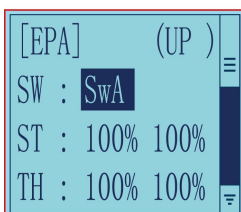

Setting item (channel and value range)

CH1 to CH7: 0%~120%

Initial value:100%

End point adjustment

Switch setting: Set a switch or button to switch in different end points.

A. You can set SWA, SWB, SWC, SWD, or the lock modes of these four switch buttons LK-A, LK-B, LK-C, LK-D.

B. "NULL" means no switch assigned. After setting the end point parameter of the corresponding channel, the transmitter will always execute the set end point, and it cannot be switched.

C. UP (up)/DOWN (down)/CNT (central): It indicates the position of the selected switch. Push/Press the switch to different positions to set different EPA.

## 2.5 Steering Exponential "STEXP"

This function is used to change the sensitivity of the steering servo around the neutral and both ends position. It has no effect on the maximum servo travel.

RATE: Steering EXP rate


Adjustment range : -100%~0%~+100%

Initial value: 0%

0%~+100%: Sensitivity around neutral position is low, getting higher when approaching ends.

0%: Sensitivity around the neutral and ends position is equal

0%~+100%: Sensitivity around neutral position is high, getting lower when approaching ends

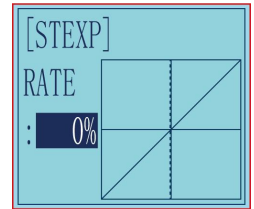

## 2.6 Steering Servo Speed Delay "STSPD"

Quick steering operation will cause momentary under steering, loss of speed, or spinning. This function is effective in such cases.

### Setup item

TURN: turn direction

RETURN: return back to the original direction

### Adjustment range

0%~100% (each direction)

At 100%, there is no delay



## 2.7 Throttle Exponential "THEXP"


This function makes the throttle high side and brake side direction servo operation quicker or milder. It has no effect on the servo maximum operation amount. For the high side, selection from among three kinds of curves (CRV/VTR/EXP) is also possible.

The curve can be divided into: Five dots throttle curve adjustment, Single point adjustment, Exponential curve adjustment, Braking index curve adjustment.


MODE:

INH: means the mixing function is disabled. Regardless of whether there is a set control switch or value under this function, it is not enabled.


ON: means turning the function on. Set the mode to ON, the current mixing control can take effect.

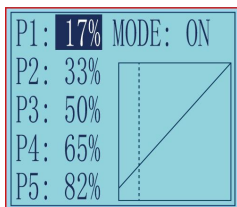


Picture 1

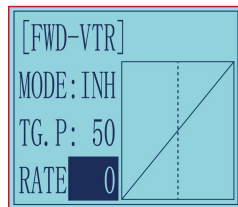

Picture 2

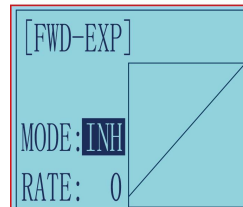

Picture 3

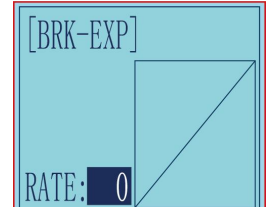

Picture 4

Adjustment method for CRV curve (See Picture 1 above)

Mode: ON/INH

RATE: 0%~100%

Adjustment method for EXP curve (See Picture 3 above)

MODEL: ON/INH

RATE: -100 ~ 0 ~ +100

Adjustment method for VTR curve (See Picture 2 above)

Mode: ON/INH

TG.P: 20-80

RATE: -100~0~+100

Adjustment method for BRK-EXP curve (See Picture 4 above)

RATE: -100 ~ 0 ~ +100

0~100: flat braking

0: uniform braking

0~+100: sensitive braking


## 2.8 Throttle Speed Delay "THSPD"

Sudden trigger operation on a slippery road only causes the wheels to spin and the vehicle cannot accelerate smoothly. Setting the throttle speed function reduces wasteful battery consumption while at the same time permitting smooth, enjoyable operation.


### Operation

Throttle servo(amp) operation is delayed so that the drive wheels will not spin even if the throttle trigger is operated more than necessary. This delay function is not performed when the throttle trigger is returned and at brake operation.

Speed1 or speed2 can be selected.OFF means shut down the throttle speed function.

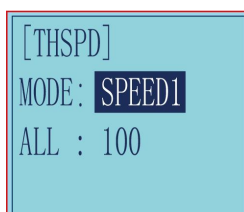

Picture 1

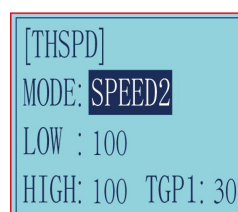

Picture 2

### Adjustment method for SPEED1

MODE: Speed type selection

ALL: Speed adjustment

### Adjustment range

0~100 (each direction)

At 100, there is no delay

### Adjustment method for SPEED2

MODE: Speed type selection

LOW: Low side range speed adjustment

HIGH: High side range speed adjustment

TGP1: Low and medium speed switching point

### Adjustment range

LOW: 0~100

HIGH: 0~100

At 100, there is no delay

TGP1: 0~100

## 2.9 A.B.S. Function "A.B.S"

### Pulse brake

When the brakes are applied while cornering with a 4 Wheel Drive or other type of vehicle, under-steer may occur. The generation of under-steer can be eliminated and corners can be smoothly cleared by using this function.

### Operation

- When the brakes are applied, the throttle servo will pulse intermittently. This will have the same effect as pumping the brakes in a full size car.

- The brake return amount, pulse cycle, and brake duty can be adjusted.

- The region over which the ABS is effective can be set according to the steering operation. (Mixing function)

### - MODE

INH: means the mixing function is disabled. Regardless of whether there is a set control switch or value under this function, it is not enabled.

ON: means turning the function on. Set the mode to ON, the current mixing control can take effect.

-ABP(Amount of brake return): Sets the rate at which the servo returns versus trigger operation for brake release. When set to 0, the ABS function is not performed. When set to 50, the servo returns 50% (1/2) of the trigger operation amount and when set to 100, the servo returns to the neutral position.

Brake return amount (ABP): 0 ~ 50 ~ 100

Initial value: 50

- Brake return amount (ABP) is influenced by the "EXP" rate on the brake side.

-DLY(Delay): Sets the delay from brake operation to ABS operation.

"0": A.B.S. function performed without any delay

"50": A.B.S function performed after an approximate 0.7 sec delay

"100": A.B.S. function performed after an approximate 1.7 secs delay

Delay amount (DLY): 0 ~ 100

Initial value; 0

-CYC(Cycle): The smaller the set value, the faster the pulse cycle.

Pulse speed adjustment

Cycle speed (CYC): 0 ~ 30

Initial value: 5

- TGP(Trigger point): Sets the trigger point at which the ABS function begins to operate at brake operation. The number is the 100 display with the full brake position made 100%.

Operation point (TGP): 0 ~ 100

Initial value: 30

-DTY(Cycle duty ratio): Sets the proportion of the time the brakes are applied and the time the brakes are released by pulse operation. The ratio can be set to +3 ~ 0 ~ -3 in 7 steps.

"-3": Brake application time becomes shortest. (Brakes lock with difficulty)

"+3": Brake application time becomes longest (Brakes lock easily)

(Remark) For low grip set at the - side and for high grip set at the + side.

Duty ratio (DTY): -3 ~ 0 ~ +3

Initial value: 0

- STM(Steering mixing): Sets the range within which the A.B.S. function is performed relative to steering wheel operation.


Steering mixing (STM)

OFF, N10 ~ N100, E10 ~ E100

Initial value: OFF

When steering mixing is set and steering operation enters the set range, "" is displayed in front of the number. When mixing is OFF, the A.B.S function can operate over the entire steering range.

[A. B. S]	CYC: 5
MODE: INH	DTY: 30
ABP : 50	DTY: 0
DLY : 0	STM: OFF

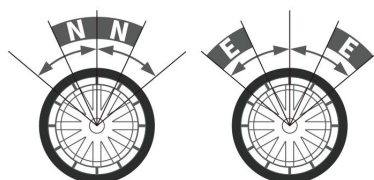

Steering operation

## 2.10 Throttle Acceleration "ACCEL"

**Function which adjusts the movement characteristic from the throttle neutral position.**

The servo will jump to the input position at its maximum possible speed. Unlike exponential, which adjusts the whole throttle movement into a curve, throttle acceleration simply "jumps" away from neutral and then leaves the remaining response linear.

FWRD: Forward side acceleration amount

BRAK: Brake side acceleration amount

(1) Forward side acceleration adjustment

"0%": No acceleration

"100%": Maximum acceleration (Approximately 1/2 of the forward side steering angle)

Forward acceleration amount (FWRD): 0%~100%

Initial value: 0%

(2) Brake side acceleration adjustment

"0%": No acceleration

"100%": Maximum acceleration (Brake side maximum steering angle)

Brake side acceleration amount (BRAK): 0%~100%

Initial value: 0%

[ACCEL]  
FWRD: 0%  
BRAK: 0%

## 2.11 Idle-up "IDLUP"

### 2.11.1 Idle-up at Engine Start

Use this function to improve the starting characteristics of the engine by raising the idling speed when starting the engine of a gas powered car.

Idle-Up rate (RATE): -50% ~ -1%, 0%, +1% ~ +50%

Initial value: 0%

"-": Brake side

"+": Forward side

[IDLUP]  
RATE: 0%  
TH-LOCK: + 20% (SWA)

### 2.11.2 Cruise Control "TH-LOCK"

In addition to adjusting the throttle speed when the throttle trigger is in the neutral position, the Idle up at engine start function can also set the throttle lock, select the throttle value that needs to be locked, and the setting range is -100% to +100%. After the throttle is locked, no matter the current No matter where the throttle trigger is, the throttle output will jump to the set value.

This function is controlled by the trigger of the SWA, two-way switch, press to lock, press again to unlock, the control switch defaults to SWA and cannot be modified.

## 2.12 Sub-trim "SUBTRIM"

### Servo center position adjustment

Use this function to adjust the neutral position of the steering, throttle and all other channel.

Sub-trim (channel and value range)

CH1-CH7: -100~0~+100

Initial value : 0

[SUBTRIM] CH4: 0  
ST : 0 CH5: 0  
TH : 0 CH6: 0  
CH3: 0 CH7: 0

## 2.13 Channel Reverse "REVERSE"

### Servo operation reversing

This function reverses the direction of operation of the servos related to transmitter steering, throttle, channel 3 to channel 7 operation.

[REVERSE] CH4: NOR  
ST : NOR CH5: NOR  
TH : NOR CH6: NOR  
CH3: NOR CH7: NOR

## 2.14 Steering/Throttle Dual Rate "D/R"

The servo travel amount of all channels can be reduced by Dual Rate setting. Dual rate function is different from EPA, which requires the travel amount on both sides of the channel to be set separately.

Setting the rate of D/R will affect the left and right travel amount at the same time. For example, after setting a smaller throttle value, the travel amount of the model forward and brake will be reduced at the same time, the setting range is 0-100, the default is 100. The steering left and right servo travels are adjusted simultaneously.

Switch setting: Set a switch or button to switch in different travel amount of each channel.

A. You can set SWA, SWB, SWC, SWD, or the lock modes of these four switch buttons LK-A, LK-B, LK-C, LK-D.

B. "NULL" means no switch assigned. After setting the travel amount of the corresponding channel, the transmitter will always execute the set value by default.

C. UP (up)/DOWN (down)/CNT (central): It indicates the position of the selected switch. Push/Press the switch to different positions to set different travel amount.

[D/R]	(DOWN)	[D/R]	(UP)
SW : SwA	ST : 100	TH : 100	CH3: 80
TH : 100	CH3: 100	CH4: 100	CH5: 100
CH4: 100	CH5: 100	CH6: 100	CH7: 100


## 2.15 Brake Side Adjustment "ATL"

This function decreases the set value when the braking effect is strong and increases the set value when the braking effect is weak.

RATE: Brake amount

Brake amount (RATE): 0%~100%

Initial value: 100%

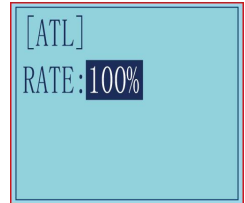

## 2.16 Programmable Mixes "PMIX01/02"

### Programmable mixes between arbitrary channels

These functions allow you to apply mixing between the steering, throttle, CH3, CH4, CH5, CH6 and CH7. PMIX01 setting is the same with PMIX02.


PMIX: Programmable Mixes

MOD: Mixing mode.

INH: means the mixing function is disabled. Regardless of whether there is a set control switch or value under this function, it is not enabled.

ON: means turning the function on. Set the mode to ON, the current mixing control can take effect.

SW: Switch to control the mix function. You can set SWA, SWB, SWC, SWD, or the lock modes of these four switch buttons LK-A, LK-B, LK-C, LK-D. "NULL" means no switch assigned. After setting the travel amount of the corresponding channel, the transmitter will always execute the set value by default.

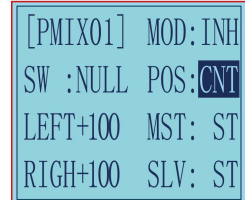

POS: means the position of the switch used to control this function. UP (up)/DOWN (down)/CNT (central): It indicates the position of the selected switch. Push/Press the switch to different positions to set different travel amount.

LEFT: Mixing rate (Left side)

Mixing amount: -100~0~+100

Select the setting item "LEFT", "FWRD", or "UP"(These setup items are different depend on the master channel. ST: "LEFT"; TH: "FWRD"; CH3-CH7: "UP") by pressing "Dec(-)" or "Inc(+)" button.

RIGN: Mixing rate (Right side)

Mixing amount: -100~0~+100

Select the setting item "RGHT", "BRAK", or "DOWN"(These setup items are different depend on the master channel. ST: "RGHT"; TH: "BRAK"; CH3-CH7: "DOWN") by pressing "Dec(-)" or "Inc(+)" button.

MST: Master channel

Channel selection (MST): ST, TH, CH3, CH4, CH5, CH6 and CH7.

Initial value: ST

SLV: Slave channel

Channel selection (SLV): ST, TH, CH3, CH4, CH5, CH6 and CH7.

Initial value: ST

### 2.16.1 Mix Control Setup

The details on how to set the mix control for dual-engine model, please view the link:


<https://www.radiolink.com/newsinfo/477940.html>

## 2.17 Auxiliary Channel "AUX-CH"

In addition to the two basic channels of the steering channel (channel 1) and the throttle channel (channel 2), RC6GS V3 also has five auxiliary channels, all of which can be customized to assign control switches.


The control switch of the auxiliary channel can be selected as ST(steering), TH(throttle), VR, SwA, SwB, SwC, SwD, LK-A, LK-B, LK-C, LK-D, NULL.(For more details of all switches, please refer to Chapter 1.1.4 Switch/Button Introduction)

Note: When it is set to NULL, the channel will not be controlled by any switch.

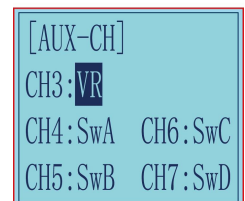



## 2.18 Model Name "NAME"

RC6GS V3 stores model memories for 30 models. Each model memory can be named separately according to user's requirement. Factory default name is MODEL1.

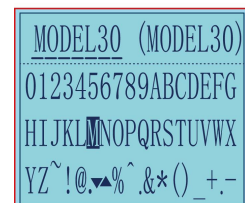


## 2.19 ALARM(Safety Alarm for Low Voltage and Signal Strength)

Each model can independently set low voltage and RSSI value alarms, but the alarm functions of RATE and temperature are not yet available. RPM telemetry functions are still under development. If there are new developments, we will announce them to the RadioLink official website as soon as possible.

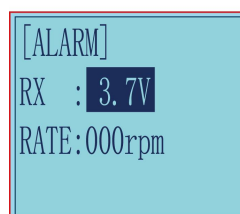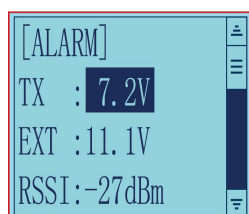


The transmitter default alarm voltage is 7.2V, and it can be customized on 2-4S battery. The receiver default alarm voltage is 4.0V, and the vehicle battery default alarm voltage is 11.1V. The RSSI alarm value is turned off by default. Users can set it as the RSSI value corresponding to the farthest safe distance of the actual control. For example, the farthest remote control distance is 400m, the corresponding RSSI value is -85dBm, then you can set the RSSI alarm value as -85dBm.


When the voltage of the transmitter, receiver, vehicle battery, and RSSI signal strength are lower than the set value, there will be a text displayed on the transmitter screen (See Pictures below) and a "didi" sound dual alarm prompt to remind you.

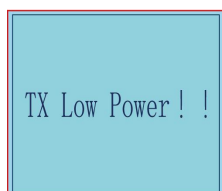

**Radio Low Power**

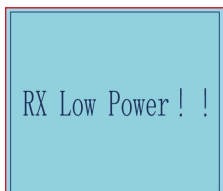

**Receiver Low Power**

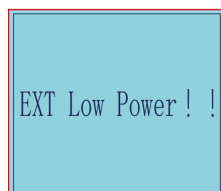


**Vehicle Low Power**




**RSSI Low Alarm**


When the above alarm interface appears, press Enter button, the TX, RX, EX, or RS will appear respectively on the home page for reminding the alarm of the transmitter, receiver, vehicle battery, and RSSI (See Pictures below). When the alarm sounds or the warning words of TX, RX, EX, or RSSI appears on the screen, please stop driving immediately and take the vehicle back, check the cause of the alarm, and deal with it properly.

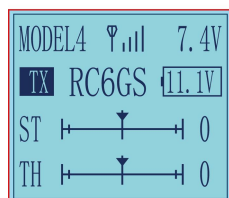


**TX: Radio Low Power**

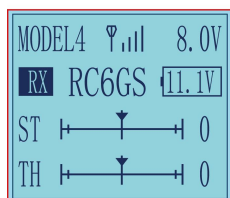

**RX: Receiver Low Power**

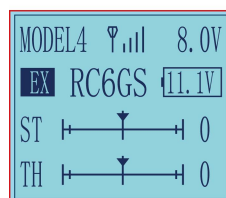

**EX: Vehicle Low Power**

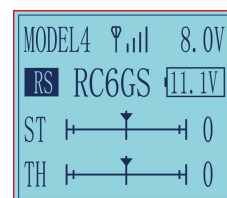

**RS: RSSI Low Alarm**

#### Note:

1. RC6GS V3 can set different low voltage alarm values for each model, but the transmitter low voltage alarm is the same for all models.
2. Due to the different voltage ranges available for lithium battery, nickel metal hydride and nickel cadmium, please set the corresponding voltage value according to the type of battery you use.


## 2.20 Gyro Sensitivity "GYRO"

This function is available to set gyro sensitivity and VR mixing ON or INH.

When MIX set INH, gyro is disabled while when MIX set ON, you can adjust gyro sensitivity STD or VR. STD is adjusted on screen and VR is default CH3.

In normal mode (STD), range of sensitivity is 0%-100%.

0% means the minimum gyro sensitivity, or even no gyro function; 100% means the maximum sensitivity. If the gyro sensitivity is too high, it may cause the body to vibrate, please adjust the sensitivity according to the vehicle model.

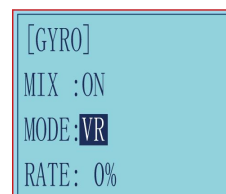


## 2.21 Fail Safe "F/S"

This function can set the output value of each channel when the receiver loses control. It is set by servo, throttle, CH3, CH4, CH5, CH6 and CH7.

#### RANGE:

CH1 to CH7: -100~+100

Initial value: 0

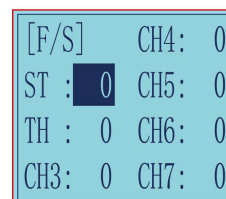

## 2.22 ID SEED

When the transmitter and multiple receivers that have been successfully paired are powered on at the same time, one of the receivers can be selected to be controlled through the ID SEED function, while the other receivers are in a standby state and cannot be controlled.


The transmitter and receiver have the following two control methods:

1. When ID SEED function is turned off (set INH), RC6GS V3 can control multiple devices at the same time.
2. When ID SEED function is turned on (set ON), RC6GS V3 can select a receiver from multiple receivers and control this model, while other receivers are on standby.

#### Setting method:

Turn on the mode, set the corresponding ID SEED number according to the number of your car/boat and complete the binding and other settings. After setting the ID SEED number, the number (such as ID01) will appear on the main interface of the transmitter.

For example: Bind RC6GS V3 with a truck and a car and turn all them on. First, use RC6GS V3 to control the car to run to the bucket of the truck, and then switch the receiver ID on the truck to drag the car back to the destination.

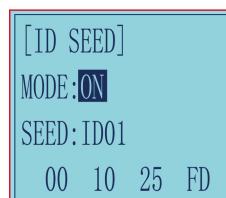



## 2.23 DSC Port Setting "DSC"


There are 3 modes for DSC function.

- (1) simulator: Connect to the simulator or TBS Crossfire (See Picture 1 below);
- (2) 2 axis track: Connect to FPV goggles with head track function (See Picture 2 below).
- (3) 3 axis track: Connect to FPV goggles with head track function (See Picture 3 below). (RC6GS V3 with firmware V6.7.7 or above supports 3 axis track. If the firmware version is lower than V6.7.7, please update the firmware to use the 3 axis track function)


simulator mode: If you need to connect simulator or TBS Crossfire to RC6GS V3, please select the mode as: simulator. Insert one end of the standard audio head of the simulator into the DSC port of RC6GS V3, and follow the steps in the simulator instruction manual to calibrate and operate the transmitter in the simulation software. Please refer to the Chapter 3.11 for how to connect RC6GS V3 to TBS Crossfire:



Picture 1

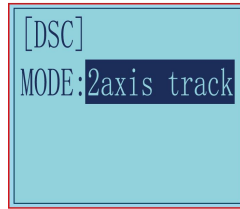

Picture 2

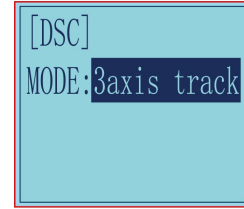

Picture 3

2 axis track mode: If you need to connect FPV goggles with 2 axis track function to RC6GS V3, set the mode to: 2 axis track (or head track in firmware below V6.7.7). When the DSC mode is selected as 2 axis track or head track, the DSC port of RC6GS V3 outputs in channel 5 and channel 6 by default. Connect the roll servo and pitch servo used to control the pan-tilt to the pins of R7FG receiver in channel 5 and channel 6, and then swing the FPV goggles up and down or left and right, and the servos of the corresponding channel will swing accordingly. Please refer to the Chapter 3.12 for how to setup head track on RC6GS V3.

3 axis track mode: If you need to connect FPV goggles with 3 axis track function to RC6GS V3, please set the mode to: 3 axis track. When the DSC mode of RC6GS V3 is selected as 3 axis track, the DSC port outputs in channel 5, channel 6 and channel 7 by default, which are used to control the pan, tilt and yaw servos.

**Note:** If you want to realize the head track function, please make sure the FPV goggles used support corresponding 2 axis or 3 axis head track function.

## 2.24 Timer Setting "TIMER"


TIMER function is mainly used for game timing and daily training.

Mode: Timer mode, you can choose "UP TIMER" or "DOWN TIMER".

UP TIMER: After triggering the timing function, the timing number will count upwards.

DOWN TIMER: After triggering the timing function, the timing numbers will count down.

ALRM(Alarm): The timer starts. When it reaches the set time, the transmitter starts to alarm. In the countdown 20S, it starts to alarm every 1S. In the countdown 10S, it starts to alarm twice every 1S. When the alarm time is reached, the transmitter will give a alarm. If the switch is not toggled now, the timing will continue. The default alarm time is 8 minutes. The alarm time can be set according to actual needs

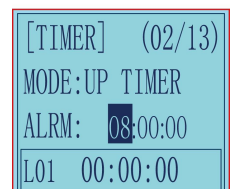


START: Select a switch or button used to trigger the timing function. You can choose SWA, SWB, SWC, SWD, TH (throttle trigger), and the lock mode of the four switch buttons.

NULL means that the timing function is not enabled. If the switch is set to SWA, SWB, SWC, SWD or their lock modes, you can select UP (up), CNT (central), or DOWN (down) for the position of the switch to trigger the timing function. If the start switch is TH (throttle trigger), you can set the throttle rate to 0%-100%, and the timing function will be triggered when the throttle trigger is pushed to the set rate.

STOP: It is used to stop the timing function. The setting method is the same as the above "START" setting. When the number of laps set is greater than 1, the number of laps will automatically increase by 1 lap each time it stops.

RESET: By toggling the switch set here, all the previously generated timing values will be cleared. Alarm values and laps are retained. The switch setting method is the same as the above "START" setting.

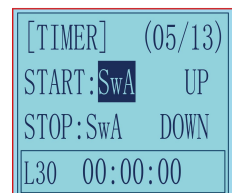

**Note:**

1. When triggering the timing function, please do not put the switch in the stop or reset position, otherwise the timing function cannot be activated.


2. When the switch is not enough, there are 2 ways to reset all timings: a. By setting the "alarm" value, all timings can be reset. b. All timings can be reset by setting the "mode" value.

LAP: used to set the number of laps required for timing, 1-30 lap numbers can be set;

Display laps: used to display the lap corresponding to the current timing.

L01-L30 can be selected. For example, when it is L02, the timing below correspond to Lap 2. When the number of laps set is greater than 1, the number of laps will automatically increase by 1 lap each time it stops.

Check the timing of each lap: move the cursor to: L01-L30, press the "Enter" button, the cursor starts to blink, and then press the "Dec(-)" or "Inc(+)" buttons at the bottom of the screen to select the laps to check the timing time. The corresponding timing lap and timing will be displayed in the box below.

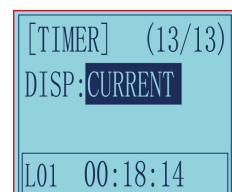

Display: CURRENT, the ON or OFF status of the timing function is only displayed in the function menu of "Timer".


HOME PAGE, the ON or OFF status of the timer function is displayed both in the "Home Page" and "Timer" menu at the same time.



## 2.25 Factory Reset “RESET”

RESET- Data reset function: All the data for any model memory can be reset to original factory defaults. Often this function is done to get a “fresh start” and clear the memory before inputting new model settings.

Note: Resetting the current model memory will permanently erase ALL programming information for that model. The data cannot be recovered. Do not reset the model unless you are certain you want to clear-out that memory and start from scratch.

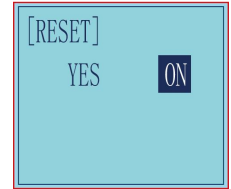

## III. Tutorials

Please search **Radiolink\_official** on YouTube to access RadioLink official channel and check all the below video tutorials of RC6GS V3. View the playlist of RC6GS V3 or search key words on our channel for the function you want.

### 3.1 Firmware Update of RC6GS V3

### 3.2 Throttle and Steering Calibration

### 3.3 Connect RC6GS V3 to Simulator

### 3.4 THSPD Throttle Delay Function on RC6GS V3

### 3.5 TIMER Function on RC6GS V3

### 3.6 Dual Rate Function on RC6GS V3

### 3.7 EPA Function on RC6GS V3

### 3.8 Set Different ALARM for 30 Different Models on RC6GS V3

### 3.9 ID Seed Function on RC6GS V3

### 3.10 Cruise Control Function on RC6GS V3

### 3.11 Connect RC6GS V3 to TBS Crossfire


### 3.12 Head Track Setup on RC6GS V3

### 3.13 LK-A/LK-D Button Setup on RC6GS V3

### 3.14 Setup FPV Monitor on RC6GS V3

### 3.15 TX Low power & Power Supply Options of RC6GS V3

## Technical Support Here

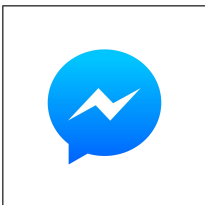

Contact **RadioLink RL**  
via Facebook Messenger



RC6GS V3 User Manual



RC6GS V3 Tutorials

If the above communication cannot solve your problem, you can also send emails to our technical support: [after\\_service@radiolink.com.cn](mailto:after_service@radiolink.com.cn)

This content is subject to change. Download the latest version from [https://www.radiolink.com/rc6gsv3\\_manual](https://www.radiolink.com/rc6gsv3_manual)

**Thank you again for choosing RadioLink product.**