




T8S Mobile/FPV Monitor Holder Instruction

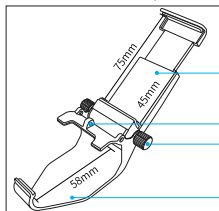



- ① Mobile/FPV monitor holder
(Size: 45mm/1.77"-75mm/2.95")
- ② Lanyard hole
- ③ Install the screws and adjust the monitor angle (90° or 135°)
- ④ T8S holder (Size: 58mm/2.28")

Installation Steps:





1. Take out the holder and red screws accessories from the box.
2. Install the 2 plastic parts as shown below.

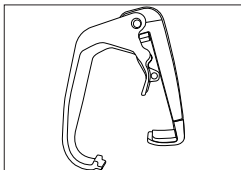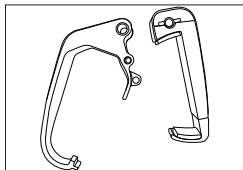


3. Use the two red screws to twist through screw holes on both sides of the holder in a clockwise direction. Be careful not to tighten the screws at this time. After adjusting the angle of the holder, you can tighten the screws to stabilize the holder.

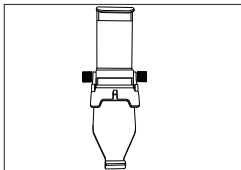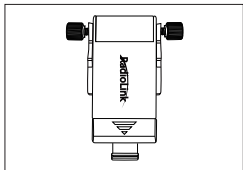

4. Install the holder on the T8S transmitter as shown below, and the installation is complete.

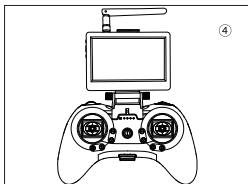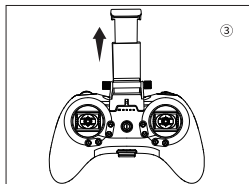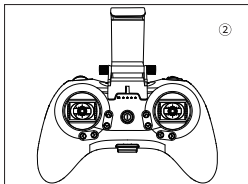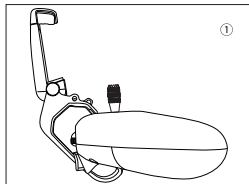

5. To remove the holder from the T8S transmitter, please take out the T8S from the bottom of the holder. Do not take out the holder from the position where the monitor is clamped to avoid damaging the holder.

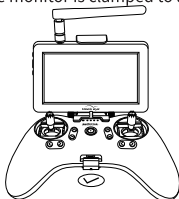

Note:

1. Only compatible to RadioLink T8S Transmitter.
2. Avoid shaking the holder when mobile or screen is used in case of dropping.